Robert Abbey, Inc.


ASSEMBLY INSTRUCTIONS FOR YOUR

ANEMONE FIXTURE

Warning: This fixture needs to be attached to a junction box that is rated for an item that weighs at least 50 lbs. If there are any questions, contact a qualified electrical contractor.

Warning: If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

IT IS RECOMMENDED THAT A CERTIFIED LICENSED ELECTRICIAN INSTALL THIS FIXTURE

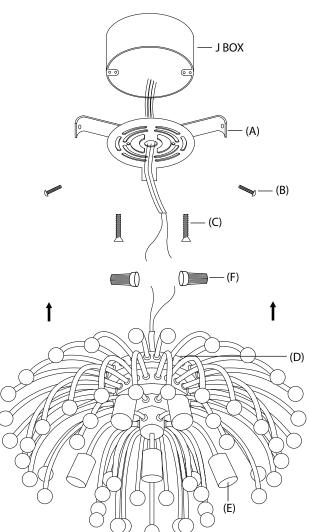

ASSEMBLY INSTRUCTIONS:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
- 2. Remove all parts from carton, do not throw away any parts.
- 3. Remove mounting plate (A) from backplate (D) by unthreading backplate screws (B).
- 4. Affix mounting plate (A) to "J BOX" with mounting screws (C). Make sure your J BOX is rated to accommodate an item that weighs at least 50 lbs.
- 5. Lift backplate (D) to mounting plate (A) and pull wiring from J BOX through center hole in mounting plate (A). Make proper electrical connections.
- 6. Attach ground fixture wire (GREEN) to either the ground screw on mounting plate (A) or to ground wire in wall outlet box (usually GREEN or COPPER in color). If attaching to ground wire in outlet box, fasten together with a plastic wire nut and tightly wrap with electrical tape. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 7. Connect the neutral (WHITE or RIBBED BLACK) fixture wire to the neutral (usually WHITE) wire from the outlet box. Fasten wires together with a plastic wire nut (F) and tightly wrap connector with electrical tape.
- 8. Connect the hot (BLACK or SMOOTH BLACK) fixture wire to the hot (BLACK) wire from the outlet box. Fasten wires together with a plastic wire nut (F) and tightly wrap connector with electrical tape.
- 9. Align holes in backplate (D) with holes in mounting plate (A). Thread backplate screws (B) into holes in backplate (D) and mounting plate (A) to secure fixture to ceiling or wall.
- 10. Insert five (5) Type A 60W max. silver tip light bulb (included) into sockets (E). Do not touch bulb as oil from skin will reduce the performance of the bulb and can cause it to burn out quickly. To prevent this, wrap bulb in cotton cloth before handling.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.